


How to set the custom grid standard for APS service area

Safety: This procedure should be conducted by qualified personnel only.

Procedure:

1. Turn the AC switch on first
2. Turn the DC switch on second
3. Verify LCD Screen and Red LED is lit
4. Go to "Advanced Settings"

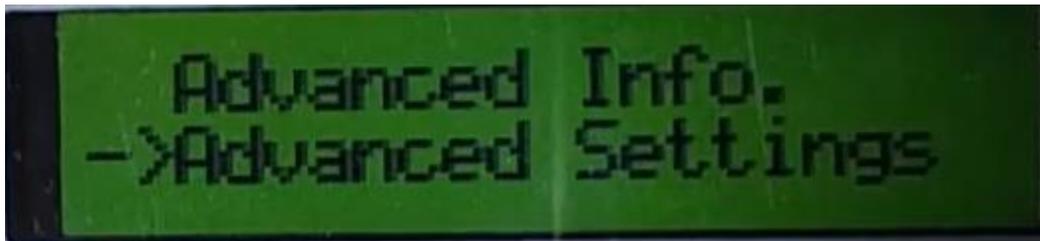

5. Enter password 0010 (down down up enter)
6. Go to "Grid ON/OFF"



7. Select "Grid Off" and wait until the inverter stops blinking
8. Go to "Select Standard"

Arizona Public Service
Custom Grid Standard



9. Select “APS 240” or “APS 208” and hit enter

APS 240 is for single phase 240V grids

APS 208 is for single phase 208V grids

10. Go to “Grid ON/OFF”

11. Select “Grid On” and wait until the inverter stops blinking

12. Go to Main Menu and wait 5 minutes for inverter to initialize.

13. Verify inverter initializes with no issues.

14. For questions or issues please call (866) 438-8408