


## How to disable the internal SunSpec transmitter for a Solis-1P(5-10)K-4G-US inverter

1. Remove the wire box cover then use a T-20 screwdriver to loosen and remove the two small screws show below

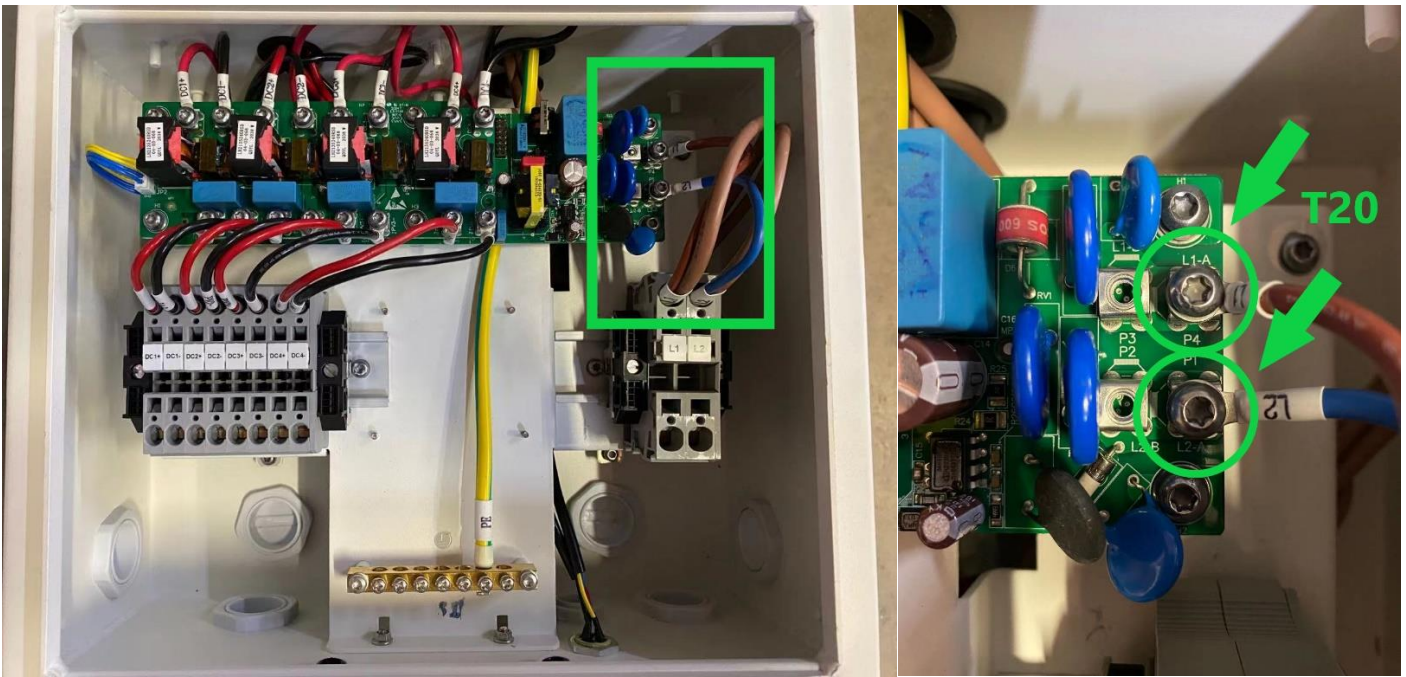

2. Tape off the ends of the blue and brown wires with wire tape so they do not come into contact with anything. Then stuff the wires out of the way, the transmitter is now disabled. The wire box cover can now be reinstalled.

